


**Continuous Strongback
Bridging Recommended.
Refer to Plans for
Placement.
Nailed as Indicated With
(2) 3" Nails.**

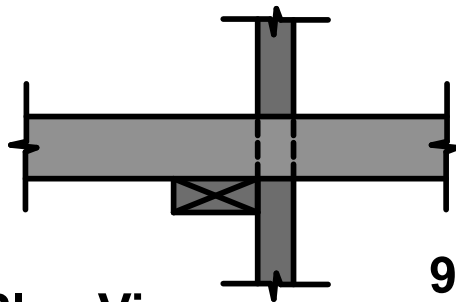

Plan View

**Framer is Advised to Install
and Nail All Strongbacks
Before Installation of the
Sub floor.**

**Note:
Not Required**

**9 1/4" Joists - 2x4 Strongback
11 7/8" Joists - 2x4 Strongback Min.
14" Joists - 2x6 Strongback Min.
16" Joists - 2x6 Strongback Min.**

**RECOMMENDED CONTINUOUS
STRONGBACK BRIDGING (ALTERNATE)**

DETAIL No. 5A